 


**Simplecom<sup>®</sup>**

LED Desk Lamp  
With Pen Holder & Digital Clock

EL621

User Manual

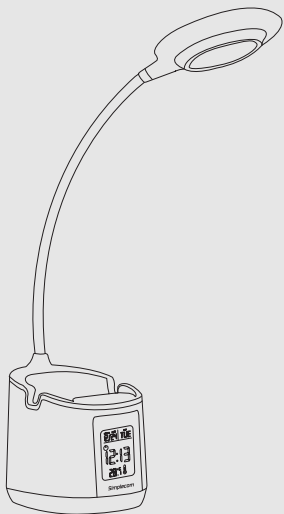

[www.simplecom.com.au](http://www.simplecom.com.au)

## Specifications

- Model: EL621
- Material: ABS Plastic
- Power consumption: 5W
- Power Input: DC 5V/1A
- CRI (Color Rendering Index): > 80Ra
- LED Dimming: Stepless
- Light Temperature: 3 Modes (3000K, 4500K, 6000K)
- Brightness: 250 LM
- Built-in Battery: 1200mAh Li-ion
- LCD Display: Data, Time, Alarm Clock, Thermometer
- Dimension: 10x9.5x11cm (Base) , 30cm (Neck), 13.5cm (Head)
- Lamp Weight: 500g


## Important Note

- Do not disassemble the product yourself to avoid electric shock
- Do not over-regulate the neck of the lamp, as it may damage the lamp joint
- Do not place the product at an unstable desk/table, to avoid damage of the lamp
- Do not place the lamp in high temperature or high humidity environment
- To avoid eye injury, do not look directly at LED light bulb
- Do not use any power adapter that exceeds the specified voltage (DC 5V), it may cause damage to the light

### **When following cases happen, unplug the power cord from lamp immediately**

- Power cord or plug is damaged
- The lamp get wet in the rain or water
- The lamp shell or the joint part is damaged
- Smoke, sparks or other safety factors occurrence of the lamp
- LED bulb flashes erratically or damaged

## Connect Power

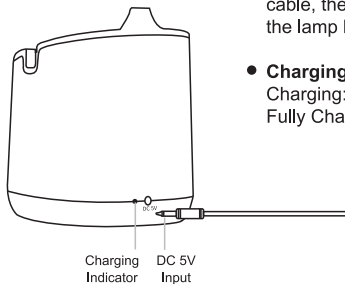


- Connect the power adapter with the USB power cable, then plug to the power socket in the rear of the lamp base
- **Charging Indicator**  
Charging: Red indicator is on  
Fully Charged: Red indicator is off


## Main Power Switch



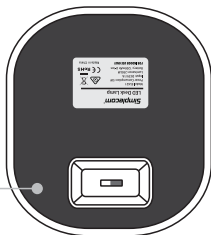



- Please turn on the main power switch at the bottom of the lamp before use

Main Power Switch

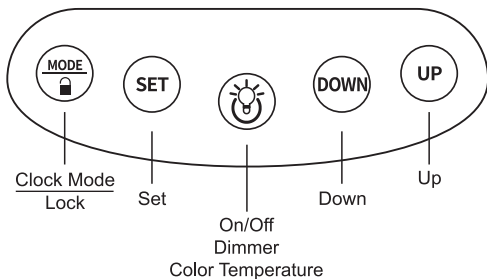

## Control Panel

 

Main Light ON/OFF	Click "  "
Color Temperature Switching	Click "  " repeatedly within 20 sec
Brightness Adjustment (30%-100%)	Long Press "  " when the main light on
Display Backlight ON/OFF	Long Press "  " when the main light off
Unlock "Mode/Set/Down/Up"	Long press "  " for 3 sec
Clock / Alarm Clock Mode Switching	Click "  "
Automatically lock "Mode/Set/Down/Up"	No other operation after 20 sec

### ! About Automatic Lock

The 4 display function keys (MODE, SET, UP, DOWN) will be automatically locked after 20 seconds no operation. This design is to avoid mis-click 4 display function keys when press the light key in the middle. Long press the MODE key for 3 seconds to unlock 4 display function keys.

### ! Turn On/Off the LCD Display Backlight

You can turn on/off Backlight of LCD Display by long press  for about 3 seconds.

## Digital Clock Setting



**Long Press "MODE" for 3 sec → Unlock "MODE" "SET" "DOWN" "UP"**

**Click "MODE" to switch between Clock Setting and Alarm Setting**

**(Icon "L" displays in the upper left corner for clock setting ):**

Press 1x "SET", then press "UP" or "DOWN" to adjust Hour

Press 2x "SET", then press "UP" or "DOWN" to adjust Minute

Press 3x "SET", then press "UP" or "DOWN" to adjust Year

Press 4x "SET", then press "UP" or "DOWN" to adjust Month

Press 5x "SET", then press "UP" or "DOWN" to adjust Day


Press 6x "SET" to Exit and Save Clock Setting

(If no operations for 1 min under clock setting, it will automatically exit and save setting)


### ! Day of the Week Display

You need to set up correct Year for displaying the right day of the week, the year setting is after Hour and Minutes setting, after set up right year, day and month, day of the week will be automatically calculated.

## Time Format Setting

- Under normal clock display, (icon "  " lights up ), press "UP" button can directly toggle the time display between 12-hour and 24-hour.
- In the 12-hour system, "PM" will display in the upper left corner of the time display, corresponding to 12:00 - 23:59 every day of the 24-hour system.

## Temperature Format Setting

- Under normal clock display, (icon "  " lights up ), press "DOWN" button can convert temperature display from Celsius to Fahrenheit.
- The temperature changes automatically according to the environment and cannot be adjusted manually.



## Alarm and Snooze Setting

1. Long Press "  " for 3 sec → Unlock "MODE" "SET" "DOWN" "UP"

Click "MODE" to switch between Clock Setting and Alarm Setting

(Icon "  " displays in the upper left corner for alarm setting ):

Press "UP" or "DOWN" → Turn ON/OFF the Alarm Clock and Snooze →

- Icon "  " lights up means the alarm clock function is in use.
- Icon "  " lights up means the snooze function is in use.

Press 1x "SET", then press "UP" or "DOWN" to adjust Alarm Hour

Press 2x "SET", then press "UP" or "DOWN" to adjust Alarm Minute

Press 3x "SET", then press "UP" or "DOWN" to adjust Snooze Interval (1-60min)

Press 4x "SET", then press "UP" or "DOWN" to Select Alarm Music (8 Options)

Press 5x "SET" to Exit and Save Alarm Setting

(If no operations for 1 min under Alarm Setting, it will automatically exit and save setting)

## 2. Stop the Alarm Music

- If you turn on the snooze mode, click "MODE/DOWN/UP" button will stop the alarm music but snooze mode will go on and alarm music will ring again. Click "SET" button not only stop alarm music but also stop snooze mode.
- If you turn off the snooze mode, click "MODE/SET/DOWN/UP" button to turn off alarm music.

## 3. Snooze Mode

Alarm music lasts for 1 minute and the alarm clock will automatically enter snooze mode (Icon " **z** " blinks). When the snooze time is reached, alarm will ring again.

**Note:** When the alarm clock rings, the main light and display will light up automatically.

## Warranty Information

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For our assistance with regards to warranty please email to [support@simplecom.com.au](mailto:support@simplecom.com.au) or create a support ticket at <http://www.simplecom.com.au>

Limited Warranty Period: 1 Year

The warranty for you, the end—user customer, that the hardware products, accessories, will be free from defects in materials and workmanship under normal usage during the Limited Warranty Period specified above. The Limited Warranty Period starts on the date of purchase by you. Your dated sales or delivery receipt, showing the date of purchase of the product, is your proof of purchase date. You may be required to provide proof of purchase as a condition of receiving warranty service.

Limited Warranty covers only those defects that arise as a result of normal use of the products, and does not cover any other problems, including those that arise as a result of:

- a. Improper or inadequate maintenance or calibration
- b. Operation outside the product's specifications
- c. Accidents, misuse, liquid spills, abuse or other causes that are not defects



[www.simplecom.com.au](http://www.simplecom.com.au)

*Simplify Your Life*

---

© Simplecom Australia All Rights Reserved. Simplecom is a registered trademark of Simplecom Australia Pty Ltd. All other trademarks are property of their respective owner. Specifications and external appearance are subject to change without notice. Warranty and technical support covering this product are only valid in the country or region of purchase.



[www.simplecom.com.au](http://www.simplecom.com.au)



[support@simplecom.com.au](mailto:support@simplecom.com.au)